
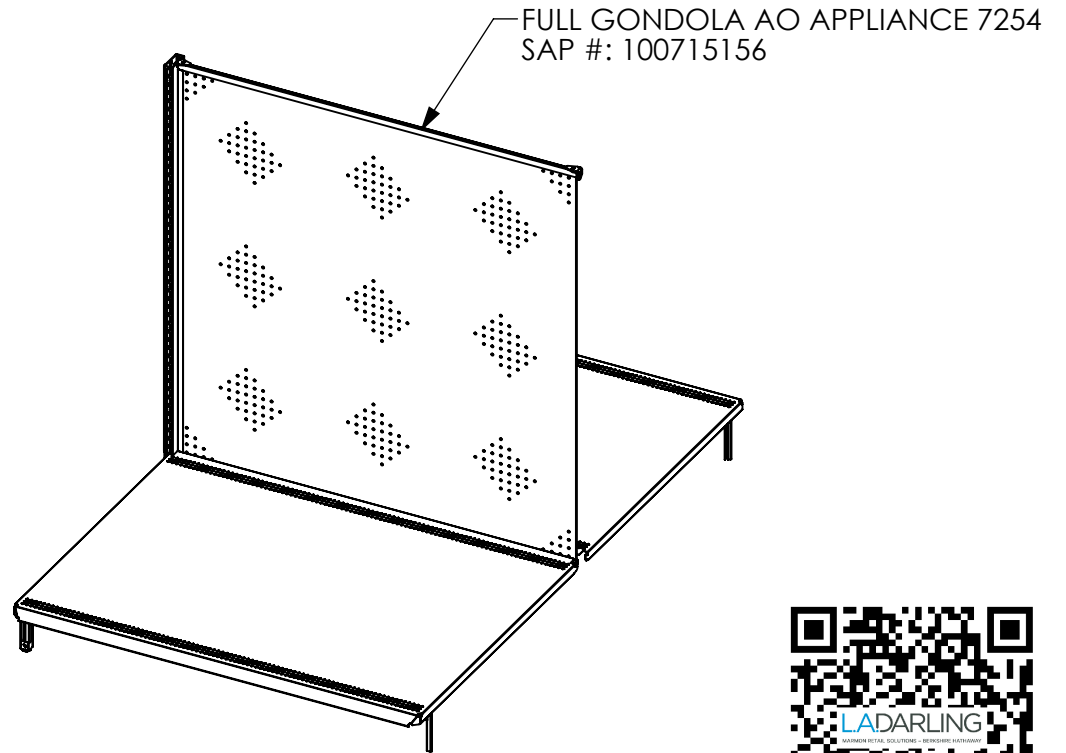



Walmart Part #: 100715155
100715156

Walmart Description:
FULL GONDOLA STR PR APPLIANCE 7254
FULL GONDOLA AO PR APPLIANCE 7254

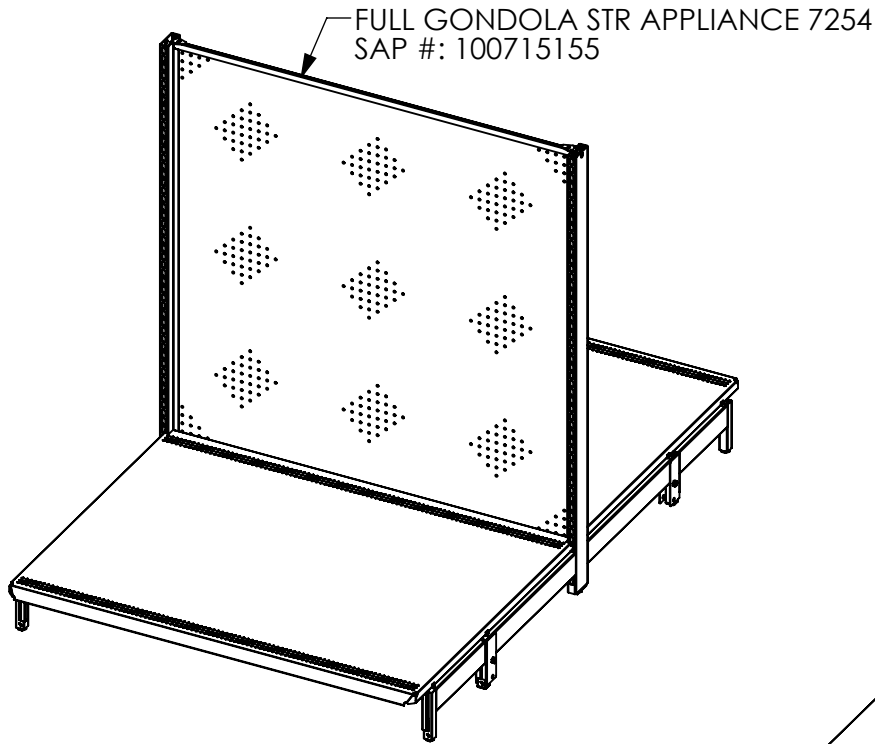


Scan the QR code or visit
www.ladarling.com/Appliance-Gondola/
for the digital copy of the instruction sheets.

Step 1: Connect baseleg extenders to upright baselegs. Secure each with nut and bolt as shown below.

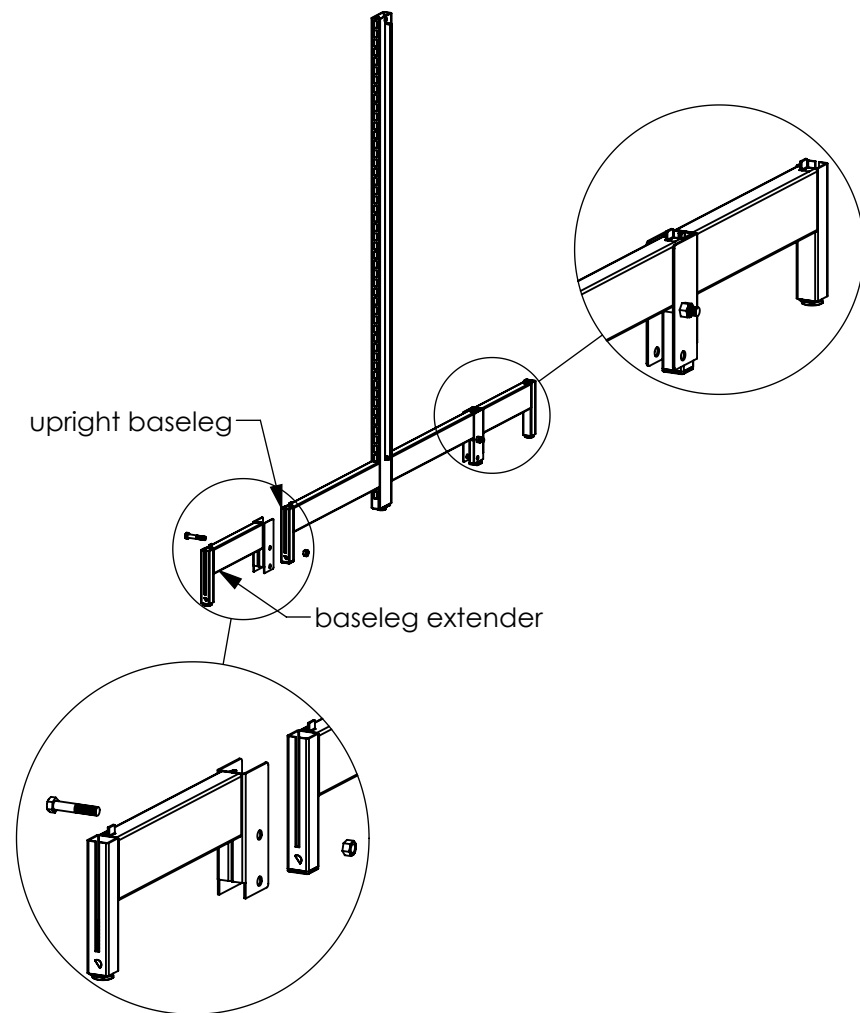

Step 2: Starting with one end upright and one intermediate upright, connect uprights by sliding open toe kickplates into notches on baseleg extenders. Continue for length of run, with last upright being an end upright.

Step 3: Lower pegboard panels in channels between uprights. Connect uprights with top panel retainers over panels, and drive top panel retainer ends onto uprights with a mallet until they lock into uprights.

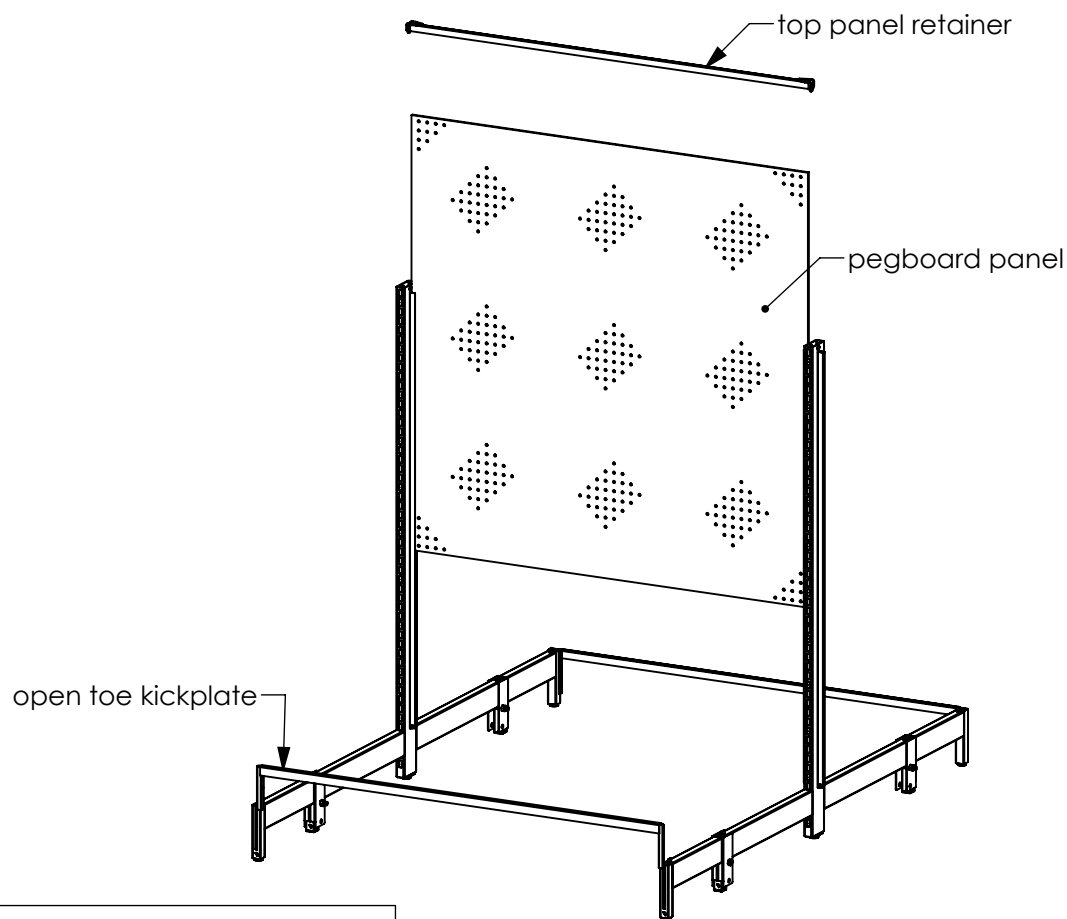

Step 4: Tilt decks to insert hooks into bottom slot on uprights. Ensure that decks rest flat on the baselegs and between baseleg "flags".

